

Read This First!

Your new KlearKase was tested and assembled at the factory. These instructions will show you how to open the case, place your Kindle inside and then seal it again.

Because your polycarbonate KlearKase fully seals your Kindle inside while allowing normal use, it offers better protection than any conventional case. But that means assembly is a little more complicated than a simple leather cover. These instructions will make it easy.

Your KlearKase consists of a top half and a bottom half, plus six sliders that fit around the edges to seal the case tightly. The sliders **MUST** be removed in a specific order, and they must be reattached in a slightly different order to fit properly. You must **REMOVE** the two **BOTTOM** sliders **FIRST** when disassembling the case and you must **ATTACH** them **LAST** when assembling the case.

There are three steps to these instructions:

In Step 1, you will remove the “sliders” that seal the case and place them on the Holding Pad for Disassembled Pieces in the center of this instruction sheet. In Step 2, you will place your Kindle in the empty bottom of the case and attach a special extension to the Kindle toggle that allows your Kindle to function even when sealed. In Step 3, you will attach the top of the case and seal it by reattaching the sliders you removed in Step 1.

The sliders look similar, but they are not identical and will fit only in their proper place on the case. The easiest way to keep track of the sliders is to carefully place them in their designated spots on the Holding Pad on this instruction sheet. That way, when you reassemble the case in Step 3, you can reach for the correct slider easily.

When you remove or attach a slider, you need to firmly pinch the nearby sides of the case. This squeezes the seal and makes it much easier to slide the sliders. An illustration of the pinch is provided in Step 1.

Important Tips

To operate your Kindle, simply press on the soft silicon plastic that covers the various Kindle control buttons or any of the keypad letters. The Kindle toggle control also works with the case sealed however, you must first add a very small extension to the Kindle toggle during case assembly, which is explained in the instructions. We have included five extensions in a variety of colors. Many of our customers leave their toggle extension on even when the Kindle is removed from the case. They say the extension is easier to locate and manipulate, and the unique color provides an easy way to identify different Kindles in a household. Attaching the toggle extension does not damage your Kindle and it can be removed with a pull.

Your KlearKase has top and bottom plastic plugs that seal the on-off switch and the charging port against spills and dirt. Gently pull out the plugs for easy access to the Kindle on/off switch and charging/USB port. The plugs are permanently attached to the case by thin plastic strips. In removing the plugs, please be careful to rock the plug gently out and not to pull too hard or break the strips. To charge the Kindle, pull out the bottom plug, insert the Kindle charger tip and charge normally, until the green light appears. For maximum protection, reinsert the plug after your Kindle is charged and keep both ports plugged.

Many thanks again for buying a KlearKase! If you have any questions, comments or stories to share, please visit our website or drop us an email.

The KlearKase Team


Web: www.KlearKase.com
email: support@KlearKase.com




© 2010 KlearKase LLC. All Rights Reserved


Step 1

Remove Sliders & Dissassemble Case

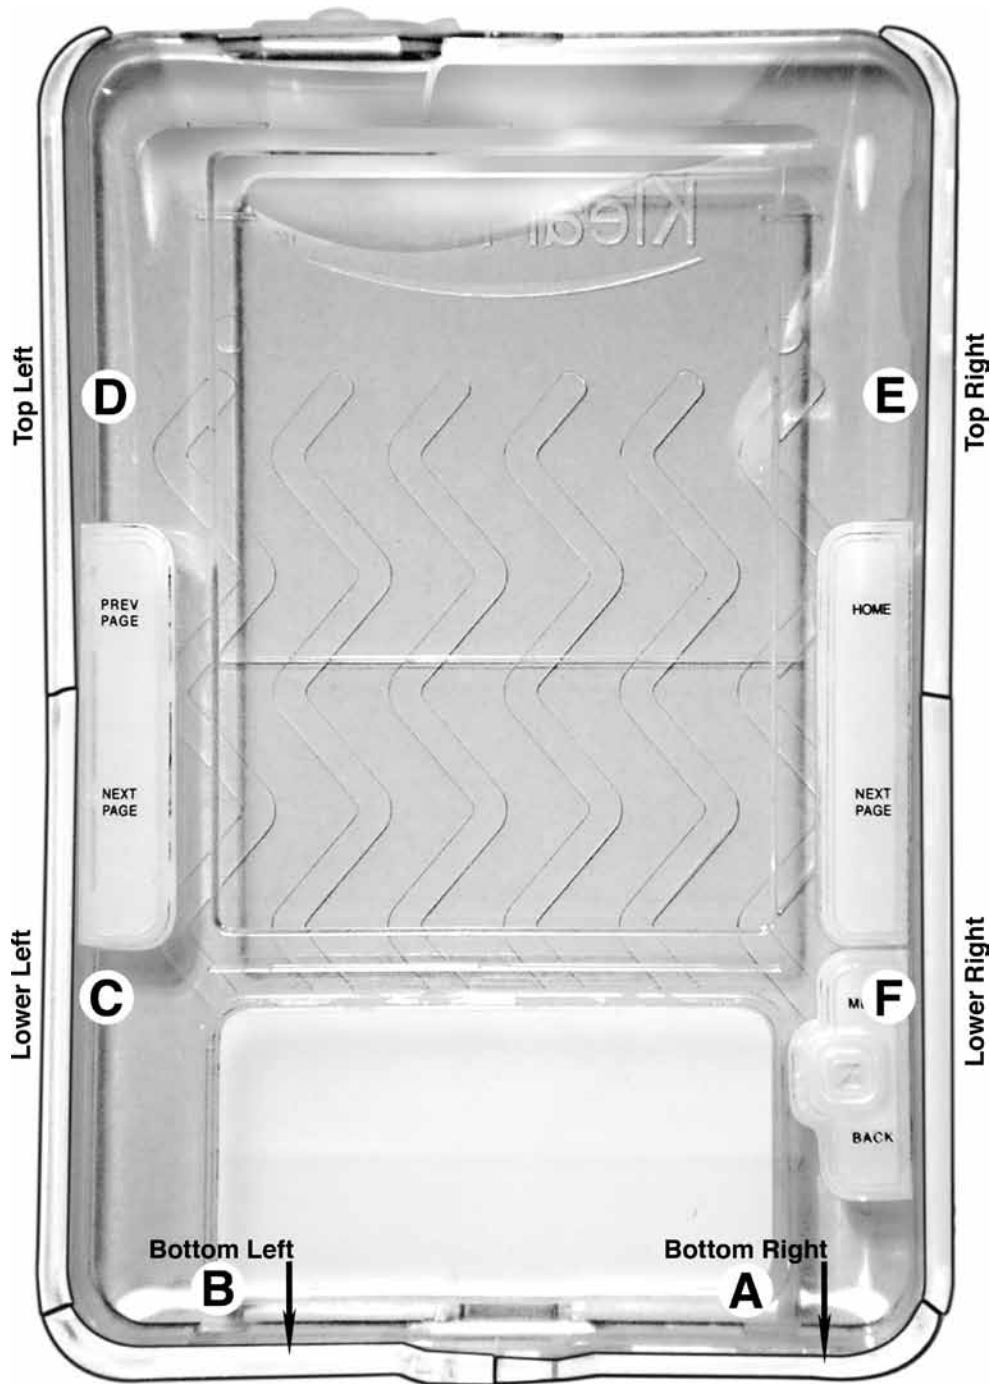

1. To remove each of the six sliders, pinch the nearby sides of the case together (see illustration at right) and then slip the slider away from the case. The motion is like sliding a child's toy train off its track.
2. As you remove each slider, be sure to place it on the Holding Pad For Disassembled Pieces to the right of this instruction. The sliders are not identical and the holding pad is the best way to keep track of them.
3. The two bottom sliders (A & B) MUST be removed first, followed by the four remaining side sliders (C, D, E & F).
4. When all sliders are removed, pull the top half of the case apart from the bottom half. Place the empty bottom half of the case on the Kindle image below step 2. Place the empty top half on its designed place on the Holding Pad.

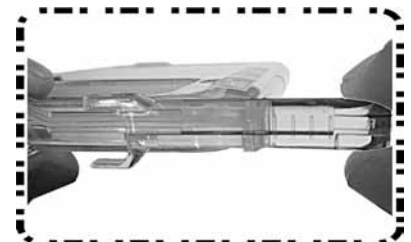


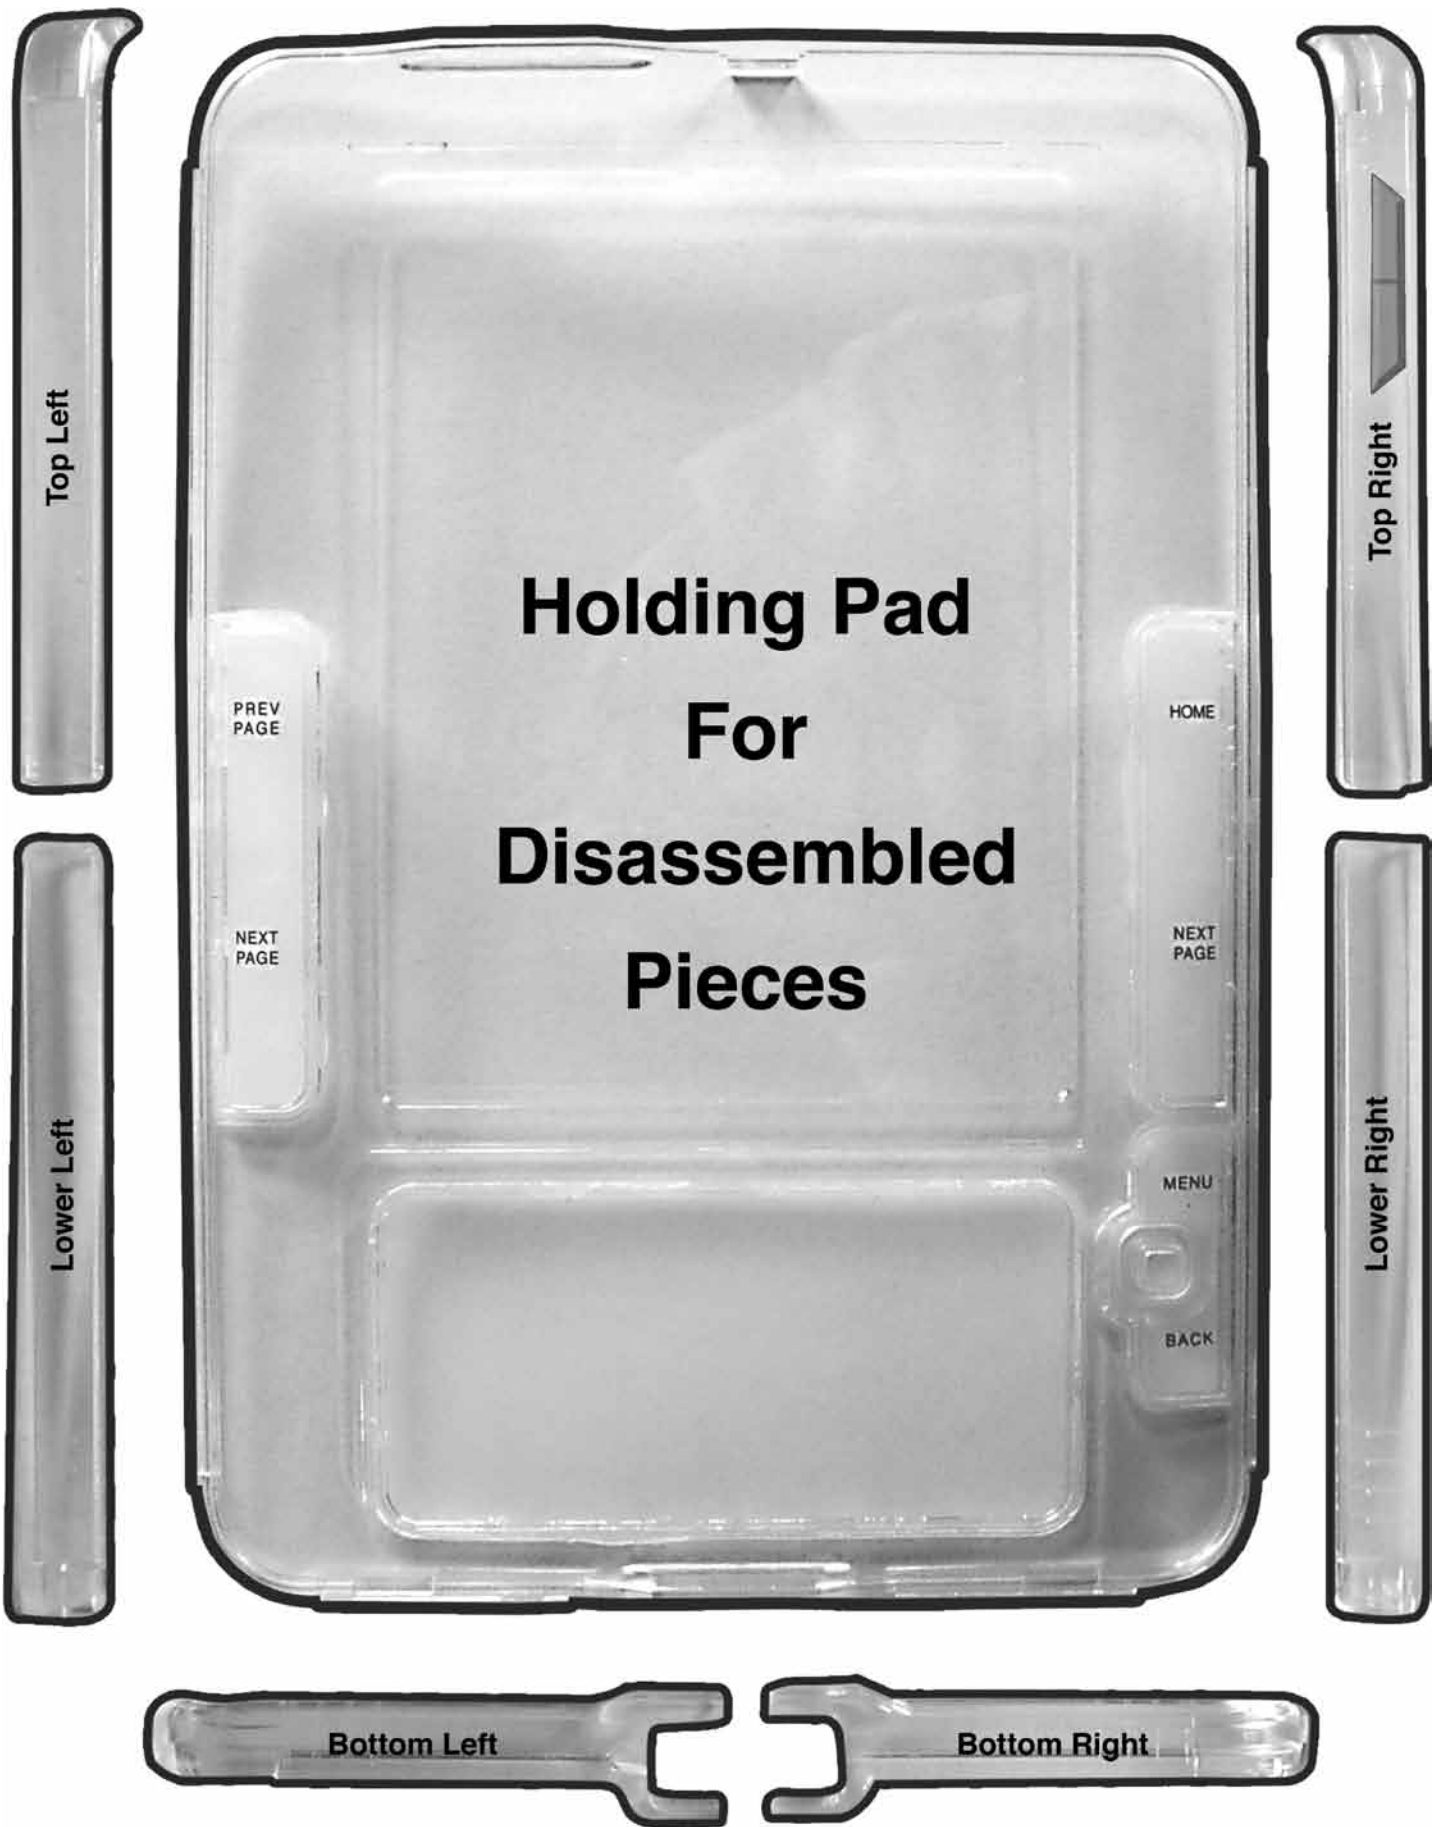


Step 2 Add Kindle & Attach Toggle Jewel



1. Before beginning this step, familiarize yourself with the illustration to the right. It shows how and where to attach the toggle jewel.
2. Place your kindle with its display facing up in the KlearKase bottom half, as shown in picture above.
3. Select one of the toggle jewels from their packet.
4. Place the toggle jewel over the Kindle toggle as shown in the illustration. Press gently with just enough pressure to depress the Kindle toggle.

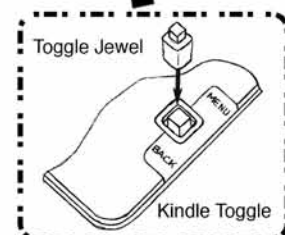

Step 3 Re-attach Top & Sliders

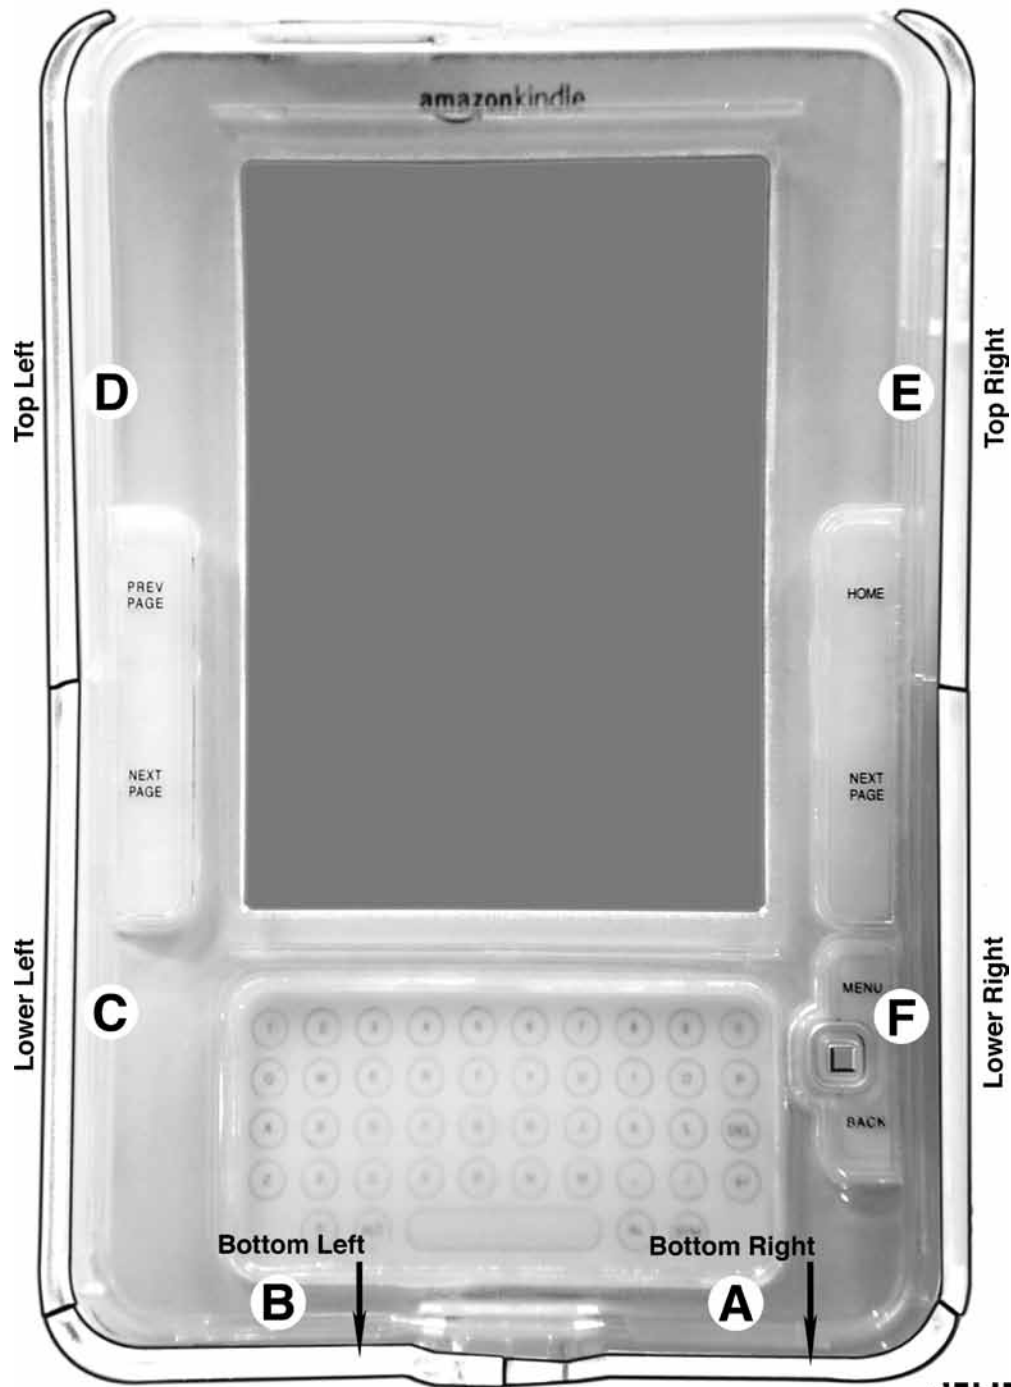

1. Place the KlearKase top half on the KlearKase bottom half with the Kindle inside. Make sure that the toggle jewel pokes thru the square hole in the top case half. This hole is located between the MENU and BACK buttons on the case, as shown at right. Press the case halves together.
2. Attach each slider. Pinch the nearby sides of the case together and then slip the slider towards the middle of the case, as shown at right. The motion is like sliding a child's toy train onto its track.
3. The four side sliders (C, D, E & F) MUST be attached first. The two bottom sliders (A & B) MUST be attached last. When the final slider is attached, your Kindle is assembled.

